

Adafruit Feather M0 LoRa on The Things Network

[Originalartikel](#)

[Backup](#)

This tutorial describes how to setup the Adafruit Feather M0 with RFM95 LoRa Radio for The Things Network and transmit the battery voltage encoded to reduce the duty cycle.

To work with The Things Network, a wire has to be soldered from DI01 to D6 (blue wire):



Adafruit [recommends](https://learn.adafruit.com/adafruit-feather-m0-radio-with-lora-radio-module/antenna-options) to solder an antenna with 8.2 cm length (for 868 MHz) to the antenna pin (yellow wire).

Setup the Arduino IDE with the necessary libraries: Follow the [tutorial](https://learn.adafruit.com/adafruit-feather-m0-radio-with-lora-radio-module/overview) on Adafruit, or if your Arduino IDE (or VS Code with Arduino integration) is already setup, do:

- Add

```
https://adafruit.github.io/arduino-board-index/package_adafruit_index.json
```

to your Additional Boards Manager URLs

- Install:

Arduino SAMD Boards

- Install:

Adafruit SAMD

- Select the Board Type

Feather M0

- Under Linux/Ubuntu, you might have to add your user to the dialout group:

```
sudo usermod -a -G dialout $USER
```

, and make sure the changes are applied.

- Select the port for your feather.

Clone this Arduino Sketch:

```
git clone https://github.com/werktag/m0-lorawan-ttn
```

Clone the lmic library adjusted for the Feather M0 LoRa into your Arduino library folder:

```
git clone https://github.com/huebe/arduino-lmic
```

(The Arduino library folder is usually be found in

Documents\Arduino\libraries

in Windows, and

~/Arduino/libraries

in Linux)

 
The changes to the original Imic library are a slower SPI speed and the correct radio settings.

Now it's time to verify the sketch and upload it onto your feather. If the Sketch can't be uploaded, a double click on the reset button of the feather might help. The blinking red LED indicates that your feather is in bootloader state and ready to be programmed.

If you don't have login for The Things Network (TTN), create one.

To adjust the TTN Credentials in the Sketch:

- In the <https://console.thethingsnetwork.org/> TTN Console, create an application.
- Add a device to the application. Give it a Device ID of your choice, click the 'Generate'; button for Device EUI, leave App Key empty and press 'Register'.
- In the Device Overview, copy the Application EUI to the APPEUI variable in the Sketch in the C-Style lsb format.
- In the Device Overview, copy the Device EUI to the DEVEUI variable in the Sketch in the C-Style lsb format.
- In the Device Overview, copy the App Key to the APPKEY variable in the Sketch in the C-Style msb format.

 As you might notice in the Sketch, the battery voltage gets squeezed into one byte:

```
Payload format Bytes: [(Bat-Voltage - 2) * 100] double measuredvbat = analogRead(VBATPIN);
measuredvbat *= 2; we divided by 2, so multiply back
```

```
measuredvbat *= 3.3; // Multiply by 3.3V, our reference voltage
measuredvbat /= 1024; // convert to voltage
measuredvbat -= 2; // offset by -2
measuredvbat *= 100; //make it centi volts
vals[0] = (unsigned char)measuredvbat; //we're unsigned
```

As duty cycle is everything when transmitting data over LoRaWan, it's recommended to compress your data as much as possible. To make the data handling easier on the server, TTN provides a decoder functionality to decode the value into the better readable JSON format. In the <https://console.thethingsnetwork.org/> TTN Console -> Application -> [your application] -> Payload Formats, add the following decoder function in the [decoder] tab:

```
function Decoder(b, port) {
```

```
var bat = b[0] / 100 + 2;

return {
  battery: bat
}
```

The decoded battery value should now appear in the Application Data Tab:  (as you might notice, the battery is charging ;))

That's it, enjoy LoRaWan with your feather!

From:

<https://schnipsl.qgelm.de/> - Qgelm

Permanent link:

<https://schnipsl.qgelm.de/doku.php?id=wallabag:adafruit-feather-m0-lora-on-the-things-network>

Last update: **2021/12/06 15:24**

